

**Materials
PRO SPECIAL!**

Unijet

Lift

Assistance in accessibility,
promoting swimming for
people with disabilities.

180°

Optional
foot rest

unijet

- No engine
- With simple anchor
- Without power supply or battery

Manufacture
HEXAGONE

**Simplified access
in less 30 secondes !**

- Space saving
- Simplified access
- Apave Certification

www.myhexagone.com



+33 (0)1 34 34 11 55

Solution for disabled lift



Minimal
maintenance

HYDRAULIC LIFT



Hydraulic disabled lift for deck level pools.

Works using the mains water pressure supplied from a hose to lift the hydraulic cylinder (minimum pressure: 3 bars).

- **Easy to use:** Control valve to raise and lower the lift, can be controlled by user or staff. No electrics or battery required.
- **Easy to handle:** Transportation wheels to easily move the Unijet from storage to the pool.
- **Easy to install:** Only one hole is needed to be drilled to install the Unijet, to secure it against tipping

Security :

- With fixing installed, tipping is not possible
- Foot rest for added security and comfort
- A pin locks the seat in the up position.



Control handle



Safety wheel in the ground



Optional
foot rest

TECHNICAL DATA

Hoisting load max.

Weight

Power supply

Structure

Seat

Warranty

Fixation

Seat course

Dimensions (WxDxH)

Depth of basin

Unijet

Up to 120 kg

55 kg

Hydraulic

316 L stainless steel painted

Rigid shell

2 years


Coring

1,20 m





70 x 70 x 170 cm

1 meter minimum

How to fix by coring in 5 steps:

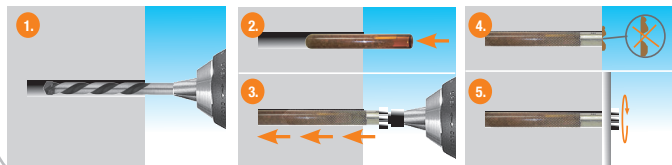

1. Drill and clean hole.
2. Insert the resin bulb.
3. Push the bit with the bit attached to the drill. (No hammer).
4. Clean excess resin.
5. Plate and tighten.
Leave to dry 1 hour before use.

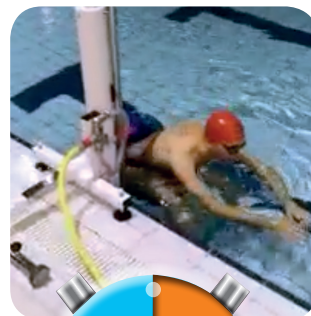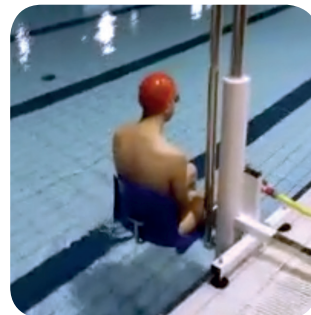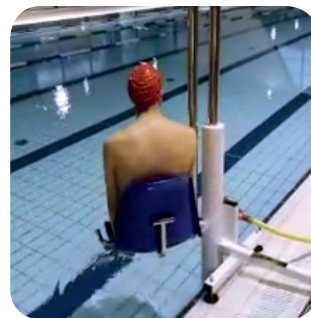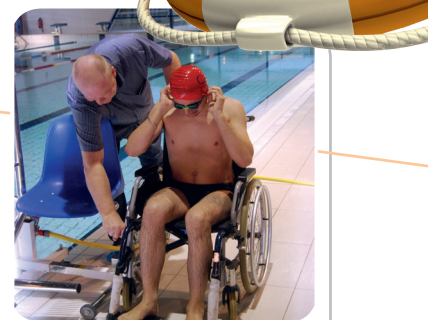

www.myhexagone.com



+33 (0)1 34 34 11 55

Solution for disabled lift